

System theremino

MasterDIL-V3

System theremino - MasterDIL-V3 - Datasheet - March 8, 2013 - Page 1

The Master module

The "Master" is the main module of the system Theremino. It puts in communication the software with the outside world via the USB.



The "Master" module has to be connected to a USB port (usb1, usb2 or usb3), and provides six Generic InOut Pins, a transmission line to the serial Slave modules and some "service" connections.

The "USB" connector can connected one or two USB ports to draw a current of 500mA or 1000mA, or 900mA and 1800mA with the new usb3.

The "Serial Line" connector is normally connected to the serial line that goes to the slaves modules with 3-wire (GND / +5 V / data). The fourth pole (Dir) is used only for the device "Master_ISO" that optically isolates the transmission line.

It is also possible to connect more than one Master with USB and serial transmission lines separated to increase the connection possibilities. It can, for example, use a high-speed serial line for devices that require a rapid refreshment and a second serial line, slower, for all the others.



Sensors and actuators are connected to the "IN OUT PINS" with standard cables (male to female extensions)



Connect the Master

Just connected to the USB, the master will automatically install its driver and, within a few seconds, the green LED starts to flash quickly. Each flash of the LED are 20 communication cycles, so the more you see it glowing nicely, the better.



Here you can see an LED connected to "Pin 1" ...

and a standard extension connected to "Pin 6"

First experiments

Prepare some leds, as in this picture.

The insulating tubes are used to distinguish the sides positive (red) and negative (black), but are not important. If you connect a LED on the contrary, it do not break and it is enough to turn it to make it work.

For further information on the preparation of these handy indicators, read here: www.theremino.com/hardware/outputs/actuators



Turn on the test LEDS

Suppose we connect three LED indicators to Pin 1, 2 and 3

Check that the positive of each led (red) is connected to the "SIG" side and that the negative (black) is connected to the "GND" side



Check that the Master is connected to a USB port and its green LED is flashing fast.

Start Theremino_HAL, that must immediately **recognize the Master** and list it as "Master 1". If the Master has not been recognized, for example, because it is connected after opening the HAL, then you must press the button "Recognize"

The second line indicates that there is a "Slave 1" (not a real slave but a virtual slave that is inside the master) the following lines indicate that are six "Pins" available, named from "Pin 1" to "Pin 6"

4	👶 Theremino HAL - V2.6							
	Type I		Subtype	Di				
	Master	1	NoName					
	Slave	1	MasterPins					
	Pin	1	Unused					
	Pin	2	Unused					
	Pin	3	Unused					
	Pin	4	Unused					
	Pin	5	Unused					
	Pin	6	Unused					

The HAL command buttons



The button "Recognize" can serve if you connect the Master late or if you change the hardware configuration.

Button "Validate" is used if you change the hardware configuration. If you add or remove Master or Slaves then the configuration is no longer valid and the "Validate" becomes active. If the configuration is not valid, the program HAL does not work. At this point you can choose to press "Validate" and to validate the new configuration or to restore the original configuration by adding or removing the Master and Slaves as needed and press "Recognize"

Button "Calibrate" is used only if there are connected "Slave" modules of type "CapSensorHQ"

The buttons "Show details" and "Beep on errors" serve to test the hardware.

Finally turn on the LEDS

🏶 Theremino HAL - V2.6									
Type	ID	Subtype	Dir.	Slot	Value	Not	Master properties		
Master	1	NoName					Name NoName		
Slave	1	MasterPins					Name		
Pin	1	Dig_out	set	1	Sleep		Rep freq. (fps) 504		
Pin	2	Unused					Error rate (%) 0.00		
Pin	3	Unused					Commenced 7		
Pin	4	Unused					Comm. speed		
Pin	5	Unused					Fast data exchange		
Pin	6	Unused					Din properties		
							Pin properties		
							Pin type Dig_out		
							Slot Unused		
							Dig_out		
							Max value Pwm_8		
							Min value Pwm_16		
							Servo_8		
							Servo_16		
							Dig_in		
							Dig_in_pu		
							Adc_8		
							Adc_16		
							Cap_8		
							Cap_16		
						 	Res_8		
(n			111			1.1.1	Res_16		
Recogni	ze	Validate	librate	30	Show	/ details	Beep on Counter		
							Counter_pu		
							Fast_counter		
							Fast_counter_pu		
							Period		
							Period_pu		
							Usound_sensor		

To turn on the LEDS you must configure their "Pins" as DIG_OUT, Pwm_8 or Pwm_16, we will use Pwm_16, which uses some more bits in the serial line, but provides the best chance of control.

Select the row of "Pin 1" (that turns blue as you can see above), then press the left button of "Pin type" and choose "Pwm_16"

Set "Pin type = Pwm_16 " also for "Pin 2" and "Pin3"

At the end the list should look like the image on the right.

Now position the mouse pointer on one of the words "Sleep", press the left button, hold it down and move the mouse upwards.

4	🟟 Theremino HAL - V2.6										
	Туре	ID	Subtype	Dir.	Slot	Value	N				
	Master	1	NoName								
	Slave	1	MasterPins								
	Pin	1	Pwm_16	set	1	Sleep					
	Pin	2	Pwm_16	set	2	Sleep					
	Pin	3	Pwm_16	set	3	Sleep					
	Pin	4	Unused								
	Pin	5	Unused								
	Pin	6	Unused								

The "Sleep" changes to a number from 0 to 1000, and the brightness of the LED of that line is adjusted from minimum to maximum. For better adjustment in the lower area, set "Logarithmic response" to all LEDS.

A little experiment is to set the "Slot 1" for the Pin 2 and 3, and try to adjust the brightness as before, you will see that all the LEDS, reading the same "slot" will change together.

Using external control programs (in the download folder you can find anything) or by creating them in Dot Net or Theremino Script you can use these LEDS, and any other sensor or actuator in many different ways.

How to use the HAL program

To communicate with the hardware, you use the HAL (Hardware Abstraction Layer)

The "Theremino_HAL.exe", requires no installation and can be run in any folder on your system. The latest version of HAL can be downloaded from here: <u>www.theremino.com/downloads/foundations</u>



To communicate with the hardware you need to keep active the HAL, you can minimize but do not close it.

Using the HAL alone, even without specific applications, you can check the hardware, try manually sensors and actuators and configure the properties of the InOut pins.

Double-clicking on a line opens the graphics window that shows the trend of the signal on that line. With a single click on a first line and with one click on another you can view them simultaneously.

All the numerical boxes are editable with the keyboard, with the mouse up/down, with the mouse wheel and the up and down arrows.

During the tests, it is very convenient to change the values in the column "Value" with the mouse (press left button on a number of the column "Value", hold the button and move the mouse up and down)

In these videos you can see how to connect modules and configure Pins <u>www.youtube.com/watch?v=iCWvlxAQw71</u> <u>www.youtube.com/watch?v=2nHv_RVNeY8</u>

How to use the Slots

Each line of the configuration corresponds to a hardware physical "Pin"

Each "Pin" corresponds to a sensor or actuator and is controlled with an appropriate "Pin type" and a "Slot"

- For the "Sensors" you configure the "Pin" as Input (Direction = get)
- For the "Actuators" you configure the "Pin" as Output (Direction = set)



The HAL program continuously repeats the following two steps:

- Reads hardware sensor and writes their values in the "Slot" assigned to each of them.
- Writes the value of each hardware actuator taken from the assigned "Slot".

The "slots" are in the "Memory Mapped File" called "Theremino1". This so-called "file" is not really a file, but a quick access memory area, shared by all the Theremino System applications.

Therefore one or many applications can, also simultaneously (*Note 1*), use the same slot to read the sensors, move motors or exchange data between them.

The HAL program serves only to communicate with the hardware via a master module and must remain lit, visible or minimized. However, if there are not hardware modules, the program HAL is not needed.

(Note 1) To use the slot you have to learn this important rule:

- One slot can be read by many applications and from the HAL, even simultaneously.
- Only a single application (or HAL) can write to a specific slot (otherwise they alternate randomly)

Configure the Master module

Each of the six In-Out pins can be configured independently as:

- Not used
- Digital output
- PWM output
- Output for servo-controls
- Digital input
- Input ADC for potentiometers and transducers
- Input for capacitive buttons
- Input for resistive transducers
- Count input, frequency and period
- Input for special transducers

CN3 CN2 AUX P1 Line Slave GND GN ______ 2 3 PINS -------------CN1 IN OUT PINS ICSP USB 3 SIG

theremino GND | SCL | +

MasterDIL-V3

GND

+500

Sign.

0 Dir.

CN4

P2 CLK

Valid configurations

- Up to 6 digital outputs
- Up to 6 PWM outputs for digital to analog conversion (Note 1)
- Up to 6 SERVO outputs for ServoMotors (Note 1)
- Up to 6 DIGIN inputs for digital signals (Note 2)
- Up to 6 ADC inputs for analog signals (Note 1)
- Up to 6 CAP inputs for capacitive buttons and sliders (Note 1)
- Up to 6 RES inputs for resistive transducers (Note 1)
- Up to 6 COUNTER inputs for counting and frequency measures (Note 2)
- A FAST COUNTER input for counting and fast frequency measures (Notes 2 and 3)
- A PERIOD input for the measurement of signal period and frequency (Notes 2 and 4) or USOUND SENSOR for SRF05 ultrasonic sensors or other similar sensors (Note 4)

(Note 1) The pin types PWM, SERVO, ADC, CAP and RES can be configured with 8 or 16 bit (Note 2) The pin types DIG IN, COUNTER, FAST COUNTER and PERIOD can be configured with or without a pullup (Note 3) FAST_COUNTER can be connected at choice at any of the six pin. (Note 4) PERIOD (or USOUND_SENSOR) can be connected at choice at any of the six pin.

Voltages and currents

The Input-Output pins work with analog signals from 0V to 3.3V. On the connectors is available the 5 Volt and a 3.3 Volt stabilized useful for some sensors. The maximum current for pins configured as output is +/-15mA. For those that configured as input instead, should limit the voltage from -0.3 Volt to +3.6 Volt and not exceed these thresholds with currents greater than +/-100uA (see technical/pin-types and technical/tables-and-notes for more information on currents and voltages)

Connectors

From version 3 onwards screw connectors have been replaced with the connectors for the standard extensions male-female. These connectors are not as beautiful to look at but more convenient and reliable. (The screw connectors required a very small screwdriver, tighten them without too much force was needed to avoid damaging the screw, but if the strength was low by the time they loosened. With the new connectors instead, connections are faster and safer)

Electric schematics



The six connectors Pin1 to Pin6, with protection resistors R1 to R6, provide six InOut generic pins, configurable to connect all kinds of sensors and actuators with the standard: GND / +5 V / Signal

The regulator IC2 and the power circuits components R9, C3, C4 and C5 stabilize the very inaccurate and noisy USB Voltage to a well stabilized 3.3 Volt. The use of three high capacity (10uF) ceramic capacitors allows to eliminate any trace of noise from the ADCs measurements. The capacitor C6, with features even better (dielectric XR5), stabilizes the voltage "VDDCORE" produced by the processor internal switching.

Communications: R9, R10 and connector CN3 allow bidirectional serial communication, recognition, and automatic configuration of the slave modules. R11, R12 and R13 and CN1 are for connecting with the USB. The auxiliary connector CN2 is used to access the interrupt pin INT-0 and the SDA and SCL pins for I2C connections (*currently no system application Theremino use the AUX connector*)

The CN4 connector has two functions: AUX PINS which shows the same pins 1 and 2 of the connectors of InOut but, unlike normal InOut pins, on this connector there is the +3.3 volt stabilized instead of the +5 Volt. The 3.3 Volt stabilized is useful to power sensors whose output signal depends on the supply voltage. **ICSP:** This connection allows you to reprogram the Master module with a PicKit1, 2 or 3, for firmware upgrades or to add new features. The white dot indicates pin 1 (VPP)

Timing: The QZ1 provides main timing, QZ2 remains active in battery mode for the clock and calendar (*not currently used*) and LED1 provides a visual indication of proper operation. The rate of exchange is twenty times the speed of flashing, if blinking quickly then everything is OK.

PCB - Components side and solder side





Connect the Slave modules

The cables to connect the serial line that goes to the Slaves are the same used to connect sensors and actuators to the Input / Output Pins.



But you should not confuse the two lines, wiring errors not cause damage, but if you do not make the right connections, these will not work.

Even if the connectors are the same, be careful! The "Pin" connectors are used for sensors and actuators while the "Serial" connectors are used to connect "Master" and "Slave" modules one to each other.



The serial line from the Master must be connected to the "IN" of the first "Slave"

To add a second slave, the "OUT" connector of the first slave is used, and so on up to 200 slaves.



The slaves can be connected in any order but if you change their disposition or their number the hardware configuration will be misaligned from the HAL program

Therefore, after connecting the Master and Slave chain, you press the button "Recognize" and then eventually "Validate", to accept the new hardware configuration to Theremino_HAL

Apply an external power supply

To power motors and actuators with strong currents, the system Theremino allows to discontinue the serial line to the slave modules, with an adapter and an external power supply. (see at the end of this page: www.theremino.com/hardware/outputs/actuators)

For applications without slave modules, or to provide more current to the six pin of the Master, you can make this change to the master:



Unsolder (or break with the clippers) the resistor R0 and solder red and black wires to bring the +5 Volt from an external power supply.

We recommend, as far as possible, to avoid the use of additional power supplies.

When designing a system that is also connected to a wall outlet, you should pay attention to:

- Place correctly the GND wires (star connections)
- Do not let the noise coming from the power supply cross the delicate connections and produce errors.
- Avoid strong current pulses caused by lightnings that may damage the components.
- Avoid construction errors or faults that can damage components or cause hazards to users.

Precautions to be taken: The Theremino System is a "Freeware", "Open Source" and "Not for Profit" project and its components are "mounting kit" and not "finished products". Therefore **when connecting the modules in a system**, **you must respect the limits of the law**, radio frequency emissions and obtain the necessary certifications. To reduce noise to the law limits, might be necessary, depending on the case, to use shielded cables and metal containers or other techniques. Manufacturers and retailers of the system Theremino are not aware of the actual conditions of use of the modules and therefore can not respond to improper use, illegal or dangerous of them. For more information, see this page: <u>www.theremino.com/contacts/copyrights</u>



Provide high current without external power supply

Motors, actuators and servos can have a current "surge" of more than the 500 mA (or 1000 or 1800) supplied by USB, but the average current is much lower. This means that it is able to drive four servos at the same time, but just one of them at full speed for a moment, can stop the USB communication. Depending on the model of the servo and of their power this problem may be more or less serious.

Some PCs and notebooks do not suffer from this problem, if you exceed the current they lower the 5Volt and restore as soon as the current falls. The actuator slows down a bit, it takes more time to get into position and then everything goes happily.

Other manufacturers have included a sadistic "warning" circuit that, as well as to warn, blocks all the USB connection. These machines are very picky, also prevent very short duration current bursts, thus preventing to solve the problem with a large electrolytic which can satisfy the surge current of the engines. If you add, for example, a 4700 uF capacitor, the USB port does not light up, that is, turns on, fails to charge the capacitor, exceeds the current, turns off immediately and stops, waiting for a human to press OK.

So who encounters these problems, should try first of all to connect a 2200 or 4700 uF capacitor between GND and +5 Volt and try to move all the engines repeatedly, trying to get him to use more current as possible.

If with the capacitor everything falls into place you stop here, otherwise you can add, in addition to the large capacitor, a "current limiter".

Limit the current

A current limiter, followed by a large electrolytic capacitor, can solve even the most difficult situations, without having to add an external power supply. The limitation is precise, much better than that of PTC normally used for the USB and in case of short circuit the output "shuts down", and "restores" automatically as soon as you remove the short ("foldback" operation)



Changing the values of the resistors you can choose the maximum current.

The limiter must be interposed between the +5 Volt coming from the USB and the power track that goes to Pins, this can be done on both the Master and Slaves, cutting the trail that leads to the +5 Volt to Pins and soldering three wires.

Note: Only the Pins power should be limited, not the processors power supply. You do not have to interpose limiters along the serial line.

Full Eagle projects, 3D images and LTSpice simulations for this limiter and for a smaller version, can be downloaded from here: www.theremino.com/hardware/outputs/actuators (at the end of the page)

Connect capacitive buttons

It would be good to procure a certain number of standard extensions, cost little and can be cut in order to obtain females and males, with the wires connected, at a price so low that it is not worth of make them.



Otherwise, you must obtain soft silicone wire and solder to **female connectors turned**, with the round hole. The other models **with the square hole**, **make contact sometimes**, **and then give you nothing but trouble.** See the advice of this page: <u>www.theremino.com</u> /technical/connection-cables



Some pieces of thread, alone or with squares of copper or aluminum tape attached, can act as capacitive keyboard.

This is a video on the capacitive keys (comfortable, fast and bounce-free) CapTouch_Sensors

Musical Keyboards



With the capacitive keys of the Master module combined with the Theremin (Polyphonic Synthesizer) and Sound Player (sampler) you can build musical instruments never seen before. To expand the number of buttons use "Servo" slaves.

More information in the instruction sheets Theremino Theremin application that you download from here: <u>www.theremino.com/downloads/multimedia</u>





Advice

The Master Pins can be configured to measure capacitance, resistance and voltage, but are not designed to replace a tester. First of all, could only measure very small capacitance, resistance up to 50K and then you should carry out laborious calibration, in order to have a reasonable accuracy.

The Input Pins could be used for process control, to adjust positions and adjust a volume or scroll through a video. In these applications it is important to make absolute measurements but it is essential to do many tens of measurements per second.

For control applications, you do not need to know the exact value but, on the other hand, the value must be very stable, and have the least possible noise so you do not "shake" the object under control.

This reasoning is, in general, valid for all InOut variables of the system Theremino

The system Theremino works with very high resolution, up to one part in 65000, much higher than the resolution of a normal tester (1 part in 2000), also the values are very stable, low noise and sampling rates are higher by hundreds if not thousands of times compared to those of a tester.

On the other hand the accuracy of the measurements is poor. With standard input-output Pins, the achievable accuracy is of the order of one percent, and it can be up to 0.1% or so, with a hardworking individual calibration.

Scalability of the system

Although the system can withstand up to 200 Servo modules, there are limits to the speed of the serial line communication, limitations due to the demands of total reliability and limits the ability to manage systems of great complexity with a simple list of Pins.

We therefore recommend to restrict the system to a few dozen modules, and then the Input Output to a few hundred. During the design of large systems consult us or experiment to see if the speeds obtainable are sufficient and whether the final system is sufficiently reliable, and manageable.

Precautions to be taken

The system is a project Theremino "Freeware", "Open Source" and "Not for Profit" and its components are "mounting kit" and not "finished products".

Therefore **who is responsible for connecting the modules in a system, comply with the limits of the law** radio frequency emissions and obtain necessary certifications. To reduce noise limits of law might be necessary, depending on the case, to use shielded cables and metal containers or other techniques.

Manufacturers and retailers of the system Theremino are not aware of the actual conditions of use of the modules and therefore can not respond to improper use, illegal or dangerous of them.

For more information, see this page: www.theremino.com/contacts/copyrights